

Sound

Access the audio settings by navigating through your menu as follows:

Menu > Settings > Sound



Silent mode


Turns off all sounds except for media & alarms when checked. Press check box to activate.

Vibration

Choose one of 5 settings for vibrating alerts:

- Always
- Never
- Only in silent mode
- Only when not in silent mode

51

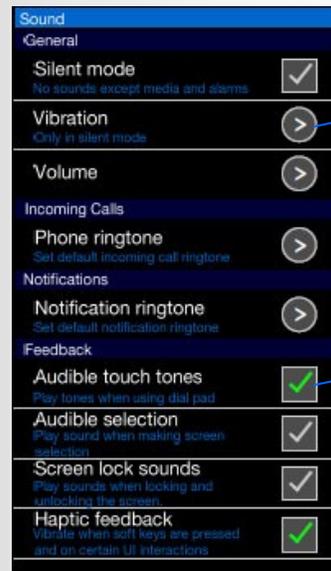

52

Volume

Sound levels may be set independently for the following events:


- Incoming
- Media
- System
- Notification

You may also allow a short tone to play when using the dial pad.

Phone ringtone

Select an alert style from the list. It will play once for you. Press again to set this as your default call ringtone.

53

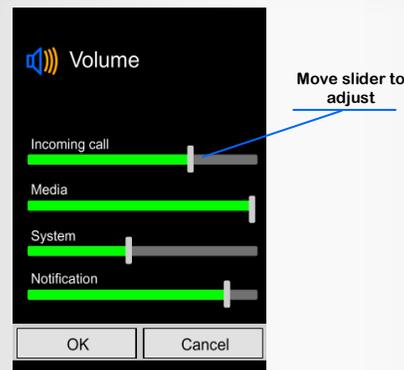

Notification ringtone

Select a tone from the list. It will play once for you. Press again to set this as your default alert type.

54

Audible touch tones

Play tones when using dial pad.

Audible selection

Play sound when making a screen selection.

Screen lock sounds

Play audio elements when locking and unlocking the screen.

Haptic Feedback

Provides a vibration response when soft keys are pressed and on certain UI interactions.

55

Vibration Intensity

Adjusts the strength of the response you feel with the phone.



Conservative use of tones and volume saves power.



56



Display

Access the Display settings by navigating through your menu as follows:

Menu > Settings > Display



Screen display

The following visual elements are available for your touchpad screen:

Font style

Choose from 3 installed typesets or you can go online and choose from hundreds of free or purchasable fonts from the Android market. Fonts downloaded from the market will automatically load into your font list and may be selected at any time.

57

Wallpaper

Occupies the background of your display in standby mode. Choose from:

- Gallery
Where your pictures are stored. Select a picture to set as your background.
- ID wallpapers
Backgrounds you have loaded into your phone.
- Live wallpapers
Unique and fun backgrounds that move. You may download these from the android market.

From any of these categories, select the set wallpaper button to activate a wallpaper on your home screen.

58



Lock screen

You may choose a separate wallpaper to distinguish between when your phone is usable and when it is locked in standby mode. Choose from wallpapers available in the gallery.

Clock Position

Set your touchpad clock location by selecting either top, middle, or bottom.

Brightness

The intensity of your display screen may be manually or automatically set. Check the box next to automatic brightness or use the manual slider to adjust brightness to your preference. Lower brightness settings use less battery.

59

Screen mode

This setting adjusts foreground & background brightness, contrast, and refresh rates to optimize media type. Choose from 3 settings:

- Dynamic
- Standard
- Movie



Auto-rotate screen

Checking this box allows your phone to automatically adjust the screen display from portrait to landscape when you move your phone sideways. You will find this feature quite handy with internet displays and when text messaging, as it expands the typeface keyboard as well.

60



Animation

Animations can be set to one of 3 preferences:

- No animations
- Some animations
- All animations



Limiting animation or disabling it altogether will not affect the screen scrolling, and will save on battery consumption.

Screen timeout

Set display to close to one of 5 delay choices:

- 15 seconds
- 30 seconds
- 1 minute
- 2 minutes
- 10 minutes

61

The screen will stay at full brightness for 75% of the allotted time, then dim for the last portion of time. When the screen closes, your phone will go back to full standby mode. Press the on button on the side of your phone to activate the lit standby screen.

Touch key light duration

The lower key pad can be set to the following on-duration choices:

- 1.5 seconds
- 6 seconds
- Always off
- Always on



Touch keys



Battery consumption is minimized with lower or off settings.

62

Auto adjust screen power

Enabling this feature allows your phone to analyze screen images for number of colors and complexity and automatically adjusts the amount of power necessary to render a quality image.

Notification flash

When enabled, the red alert light at the top of your phone blinks continuously when messages are received and have not been viewed.

Gyro sensor calibration

The internal gyro is factory preset and over time you may notice your phone not reacting properly to phone re-positioning. This condition may especially manifest itself if the phone is dropped or otherwise rough-handled.

63

If your screen begins to not reposition properly, use this feature to recalibrate your phone. This will restore phone positioning to factory pre-set accuracy.

Power Saving Mode

Power saving mode has two primary settings, ON/OFF and a battery consumption level trigger to initiate power saving.

Use Power saving mode

Turns this feature on or off.

64

Power saving mode on at

Choose from the following consumption levels to trigger power saving mode:

- 10% battery power
- 30% battery power
- 50% battery power
- 70% battery power

Turn off Wi-Fi

Disengages Wi-Fi when not connected with mobile AP.

Wi-Fi is also set in the previous section Wireless and network. Enabling this setting will override those settings when power saving mode is in effect.

65

Turn off Bluetooth

Turns off headset transmission when not in use.



LG stereo headset

Turn off GPS

Deactivates your GPS system when not in use by you.

Turn off Sync

Turns off automated synchronization when phone is not connected with a server.

66

Brightness

Turn this setting on or off. If activated, power saving mode will reset your screen intensity to one of the following choices:

- 10%
- 30%
- 50%
- 70%
- 100%

Screen timeout

Your default screen closure in power saving mode resets to one of the following choices:

- 15 seconds
- 30 seconds
- 1 minute
- 2 minutes

67

Power saving tips

Wi-Fi

Turn off the Wi-Fi when not connected with mobile AP. This will extend battery life. If you use the internet frequently, using a local wi-fi source is recommended, as it uses less power than cellular data services.

Bluetooth

Turning off Bluetooth saves battery life. Leave this feature off when not in use.

GPS

GPS enabled applications continuously use power. If not actively engaged in the use of these features, leave GPS off.

68



Data Sync

Dynamic sites such as Twitter, Facebook, Gmail, etc. automatically update whether your phone is on or off, and dependent upon your settings as well. It is recommended to set these features to manual update only, hence they will not refresh until you engage the feature, and thus will save on battery consumption.

Brightness

Using the Automatic brightness feature, or lowering brightness manually, results in significant power savings.

